



CellSPY Lite

A BATTERY COMMISSIONING TOOL

INSTALLATION GUIDE




40 OR 60 CELLSPY LITES


1 CAT PHONE

1 WIRELESS CURRENT TRANSDUCER


1 To install CellSPY Lite, place the black clamp over the negative post and the red over the positive.

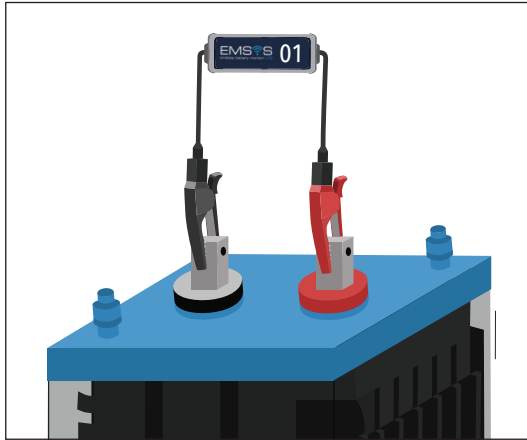

2 Ensure that the thermistor, is as close to the post as possible.

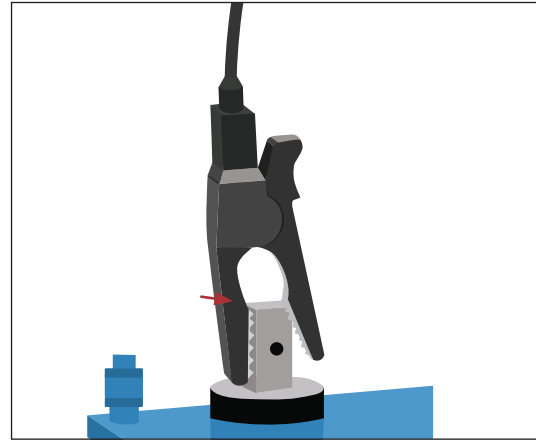


3 Install the remaining CellSPY Lite sensors in order. If you are using multiple boxes, start with sensor 1 from box 2 after installing all sensors from box 1.

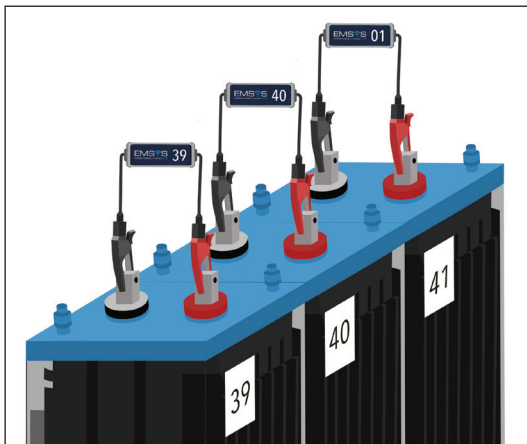

4 Clamp the WCT over the intercell cable with arrow pointing in direction of charge current, or towards the most negative cell in the string.



5 To power the WCT, power it over 8-60V. Check the voltage across the batteries with a voltmeter to double check.

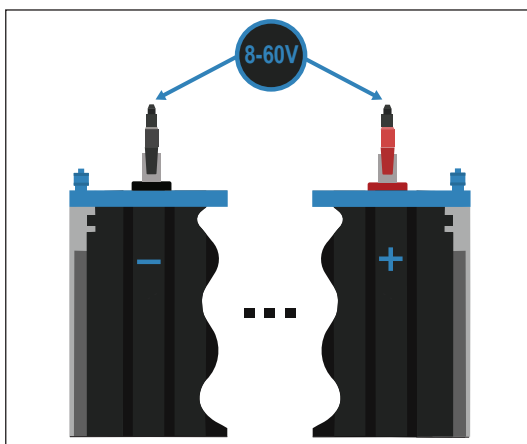

6 Open the application on the provided mobile device- at the bottom of the home page, make sure all cells are responding.

